



Fill Valve and Pump Control Field Wiring Changes

To better standardize wiring for various models of Water Level Stabilizer units the wiring was modified. This change is effective immediately.

On page 3 and the bottom please make the following change.

From Valve Wiring
 TB3-5 Connect wires from valve. 18 awg
 TB3-6 The wires are interchangeable 18 awg

To Valve Wiring
 TB3-4 Connect wires from valve. 18awr
 TB3-5 The wires are interchangeable

Please use the following wiring diagram. This replaces the wiring diagram on page 6 of the 3001 Manual P/N 1010050 Rev. A .

